




BALL VALVE ASSEMBLY DISPENSE INSTRUCTIONS

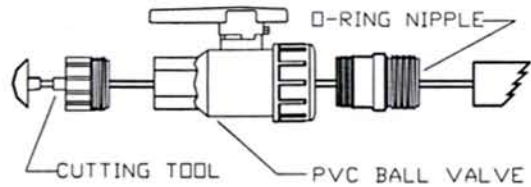


1. TO EASE INSTALLATION, SEPARATE ALL THREE COMPONENTS OF THE BALL VALVE ASSEMBLY.

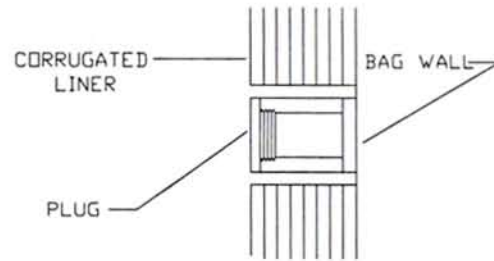


2. REMOVE THE PLUG FROM THE BOTTOM DISCHARGE OUTLET.

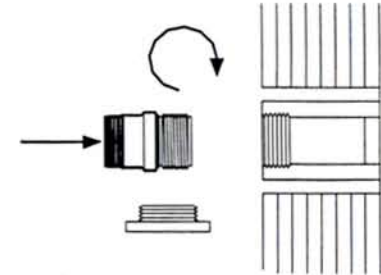


3. SCREW THE COARSE THREADED MALE END OF THE 2" NIPPLE INTO THE BOTTOM OUTLET UNTIL HAND TIGHT.

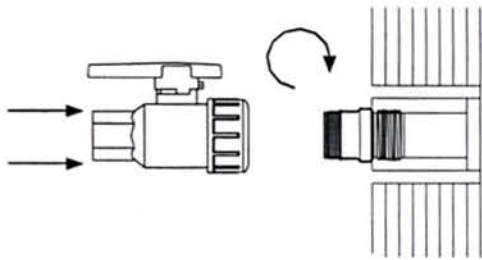


4. CHECK TO MAKE SURE THE LARGER DIAMETER END OF THE VALVE IS AWAY FROM YOU. NEXT, SCREW THE VALVE UNIT AND NIPPLE TOGETHER UNTIL HAND TIGHT.

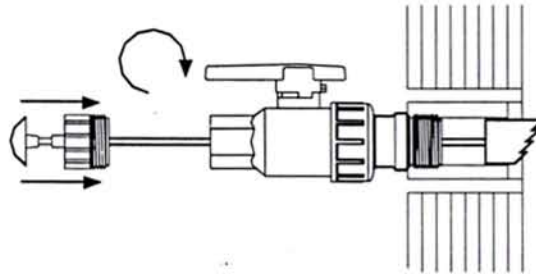


5. WITH THE BALL VALVE IN THE OPEN POSITION, SCREW THE CUTTER TOOL INTO THE VALVE UNIT UNTIL HAND TIGHT.

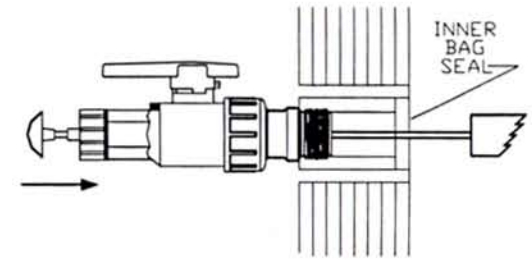


6. NEXT, PUSH THE HANDLE OF THE CUTTER TOOL TO EXTEND THE PLUNGER THROUGH THE VALVE INTO THE BAG.

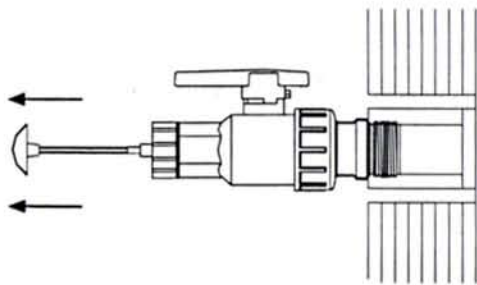

7. ONCE THE BAG HAS BEEN PUNCTURED, WITHDRAW THE PLUNGER BY PULLING BACK ON THE HANDLE OF THE CUTTER TOOL.

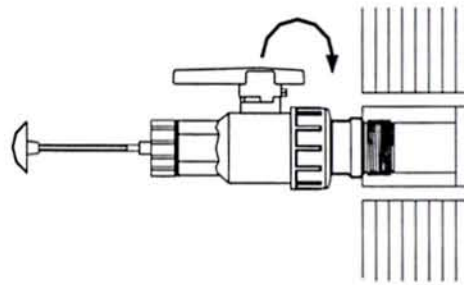

8. WITH THE PLUNGER FULLY EXTRACTED, CLOSE THE VALVE.

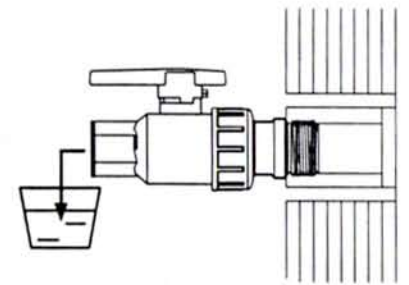

9. REMOVE THE CUTTER TOOL AND ATTACH THE DESIRED DISPENSING FITTINGS.

NOTE: 8 OUNCES OR LESS OF FLUID WILL LEAK OUT. A CUP MAY BE PLACED UNDER THE VALVE TO CATCH IT.